



# USER'S MANUAL

## Part 2

# TRIMLINE Memory Telephone 210

---

*Please also read **Part 1** —  
**Important Product Information.***



 
For Customer Service Or Product  
Information, Visit Our Website At  
[www.telephones.att.com](http://www.telephones.att.com)

AT&T and the globe symbol are registered trademarks of AT&T Corp.  
licensed to Advanced American Telephones.

© 2000 Advanced American Telephones. All rights reserved.  
Printed in Mexico. 850003435 Issue 1AT&T 5/00

# PARTS CHECKLIST

Remember to save your sales receipt in case you ever need warranty service, and make sure this telephone package includes the items shown below:

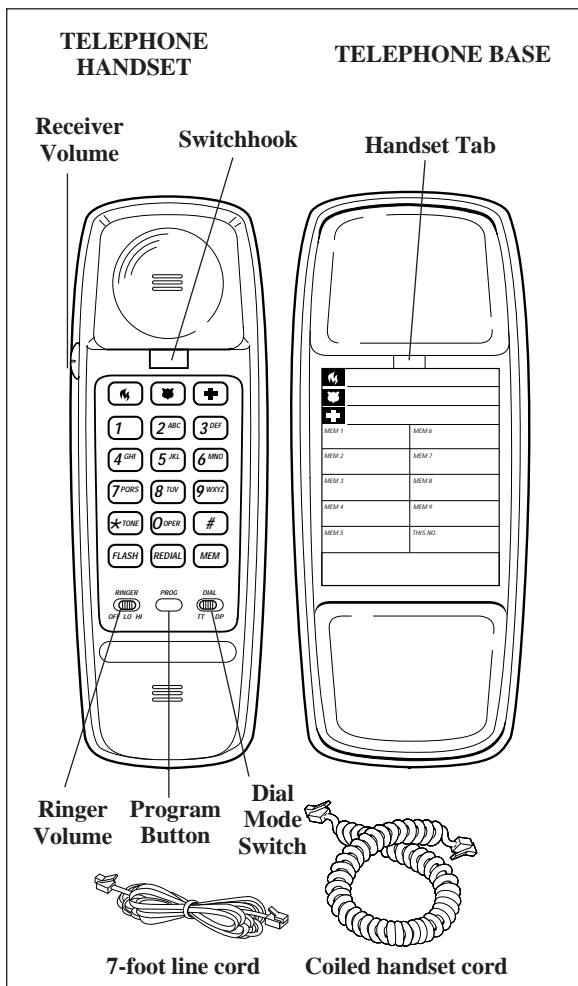

## TABLE/DESK INSTALLATION

This telephone includes a 7-foot line cord with a modular plug on each end. Use this cord to connect the telephone to a modular jack.

### 1. Fill in directory card

Remove the directory card and write in your own telephone number. Also write the telephone numbers (or names) that you want to store in each memory location.

Reinstall the card and clear plastic cover.

### 2. Connect line cord to telephone

Plug the long line cord into the jack on the underside of the telephone base. Then feed the line cord through the channel provided so the telephone sits flat on your table or desk during use (Figure 1).

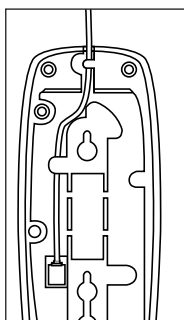 


Figure 1

### 3. Connect line cord to wall jack

Plug free end of the line cord into a modular jack. Make sure it snaps firmly into place.

### 4. Set DIAL Mode switch

This product comes set in the tone (TT) mode. Make sure you choose the correct dialing method (TT/DP); touch tone dialing will not work if you have dial pulse service.

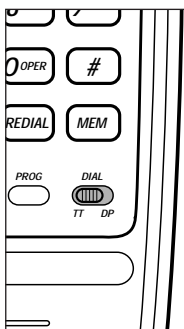 


Figure 2

### 5. Connect handset to base

Plug one end of the coiled handset cord into the handset, and the other end into the base. Then hang up.

### 6. Check for dial tone

Lift the handset and listen for dial tone. If you cannot hear a dial tone, refer to “In Case of Difficulty” and try to correct the problem.

**TO DISCONNECT** the telephone, squeeze the clip on the modular plug and pull it out of the jack.

# WALL INSTALLATION

## 1. Fill in directory card

Remove the directory card and write in your own telephone number. Also write the telephone numbers (or names) that you want to store in each memory location.

## 2. Reverse handset tab

To install the telephone on a wall jack, you must reverse a small tab beneath the directory card. This tab holds the handset in place when you hang up.

Remove the directory card and plastic cover. Use a paper clip to lift and remove the handset tab. Reverse the tab and reinstall it as shown (Figure 1). Then replace the directory card and cover.

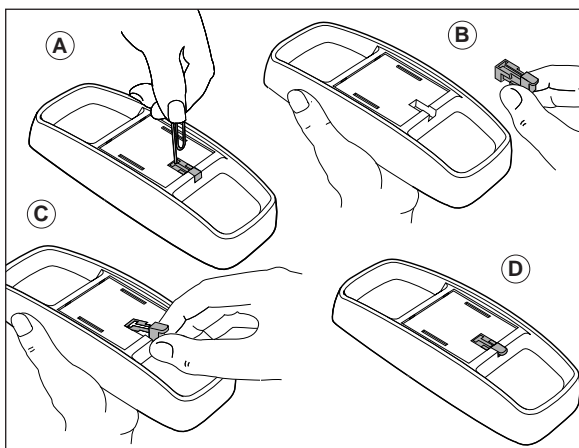 


Figure 1

- ## 3. Plug the line cord into the jack on the underside of the base.
- Feed the line cord into the channel and wind it around the mounting area. Feed the last portion (as short as possible), through one of the slots in the mounting area (Figure 2).

*(Continued)*

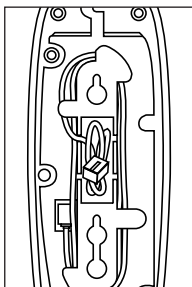 


Figure 2

## WALL INSTALLATION (continued)

### 4. Install telephone base on wall jack

Hold the base up next to the wall jack, and plug in the line cord (Figure 3). Then push the base against the wall jack and down until it is held securely by the mounting studs.

**NOTE:** If you cannot fit the base onto the wall jack, remove the four non-slip pads.

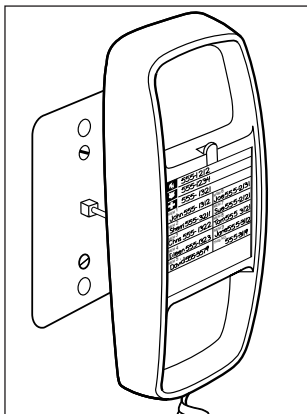 


Figure 3

### 5. Set DIAL Mode switch

Refer to step 4 in Table/Desk Installation.

### 6. Connect handset to telephone

Connect one end of the coiled handset cord into the base. Plug the other end into the handset (Figure 4). Then hang up.

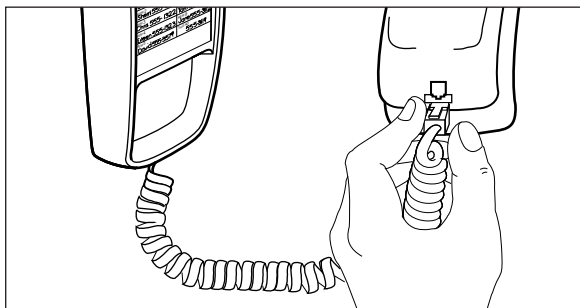 


Figure 4

### 7. Check for dial tone

Lift the handset and listen for dial tone. If you cannot hear a dial tone, refer to “In Case of Difficulty” and try to correct the problem.

## OPERATION

---

### Redial

---

This telephone always stores in memory the last phone number dialed.

The redial memory can accept numbers up to 32 digits long. The number will remain in memory until you change it by dialing another telephone number.

To dial the same number again, lift the handset, and press **REDIAL**.

---

### Erasing Redial

---

For privacy, you can erase the redial memory. Lift the handset, then press **1** and hang up.

---

### Flash

---

Press **FLASH** instead of pressing the switchhook to activate custom calling services such as call waiting or 3-way calling.

You may have to press other buttons before or after **FLASH** as explained in custom calling instructions provided by your local telephone company.

---

## Ringer Volume

---

The Ringer Volume switch allows you to turn the telephone ringer OFF, or set it to ring at LO or HI volume. You can dial or answer calls normally when the ringer is off. Other telephones in your home will still ring; they are not affected by the switch.

---

## Receiver (Handset) Volume

---

 
The Receiver Volume switch on the side of the handset can be adjusted for a comfortable listening level. The switch has three volume positions.

---

## Temporary Tone Dialing

---

Temporary tone dialing is used only when you have rotary service. It allows you access to services that require tone signaling, including some tone-activated computer systems (e.g., telephone banking).

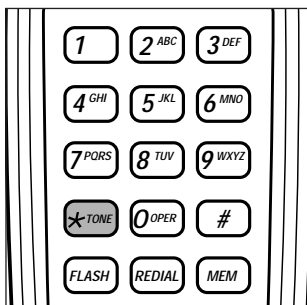

To change from pulse (rotary) to tone dialing during a call:

1. Dial a telephone number with the DIAL Mode switch set to PULSE.
2. Press **\*Tone**; all buttons pressed after this will send tone signals.
3. After you hang up, the phone automatically returns to rotary service.

# MEMORY DIALING

## Memory Features

 
Numbers will remain stored in memory unless you erase or change them by entering other numbers.

**Capacity:** This telephone can store up to 12 different phone numbers, each up to 21 digits long.

**One-Touch Dialing:** Three numbers can be stored in one-touch memory locations. You can dial these numbers by pressing one of the buttons marked with an emergency symbol.

**Speed Dialing:** Nine telephone numbers can be stored in standard speed-dialing locations. You can dial any of these numbers by pressing two buttons.

**Directory Card:** Remove the directory card. Write your telephone number in the space provided. Also write the telephone numbers (or names) that you want to store in each memory location. Reinstall the card and clear plastic cover.

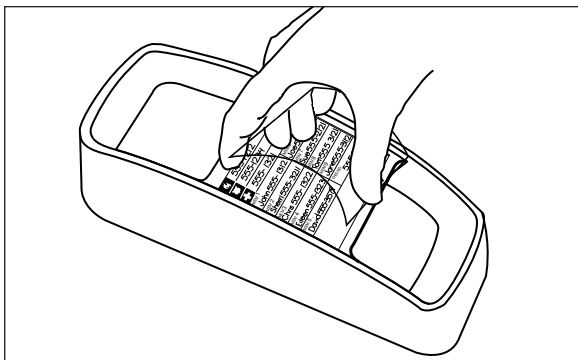

**NOTE:** Numbers programmed into a memory location might not be retained if the telephone has been unplugged from the line jack for a half hour or more.



**Emergency Numbers:** You may choose to store emergency numbers in the one-touch memory locations marked with fire, police and medical symbols.

However, we recommend that you also write the telephone number on the directory card so that if the memory feature does not function, you can still manually dial an emergency number.

If you choose to store non-emergency numbers in these locations, it is important to remember that someone visiting your household may assume that they are dialing an emergency telephone number when they press one of these emergency symbols.

**NOTE:** You may choose to store emergency numbers in memory locations marked with fire, police and medical symbols. However, speed dialing and emergency calling symbols are provided only as a convenience. The manufacturer does not assume responsibility for customer reliance upon this memory feature.

**NOTE:** Although testing the programming of emergency numbers is not a recommended procedure, if you do make a call to an emergency number:




- A. You must remain on the line and briefly explain the reason for the call before hanging up.
- B. Programming/testing of emergency numbers should be performed in the early morning or late evening (off-peak hours).


---

## One-Touch Dialing



 
---

### To program numbers into memory

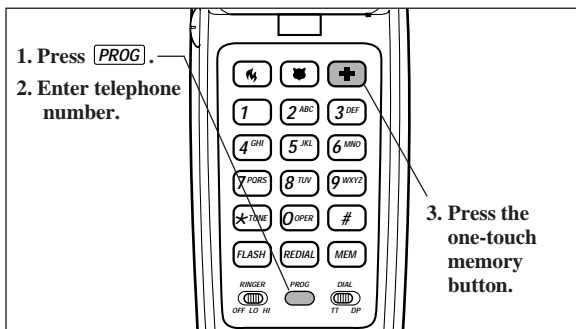1. Press **PROG**.
  2. Enter telephone number. You will hear a click when each button is pressed.
  3. Press the memory button ,  or , where the number is to be stored.
  4. Hang up after the number is entered correctly.
- Repeat steps 1-4 to store another number.



### To dial

1. Listen for dial tone.
2. Press the one-touch memory button (,  or ,).

*(continued)*

 
*(Turn over for more Memory Dialing and In Case of Difficulty)*

## MEMORY DIALING (continued)

### Speed Dialing

#### To program numbers into memory

1. Press **PROG**.
  2. Enter telephone number. You will hear a click when each button is pressed.
  3. Press **MEM**.
  4. Enter a digit (1-9) for the memory location where the number is to be stored.
  5. Hang up after the number is entered correctly.
- Repeat steps 1-5 to store another number.

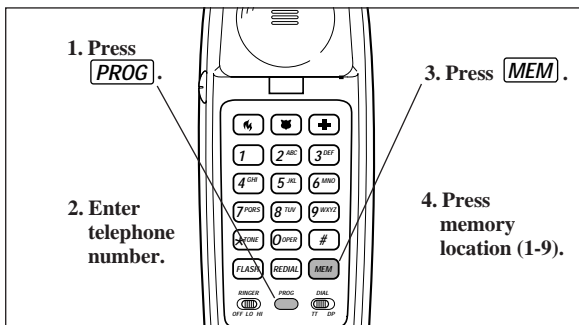

#### To dial

1. Listen for dial tone.
2. Press **MEM**.
3. Press memory location (1-9).

### Memory Erase

To erase any number from memory, you can enter another number in the same location.

## IN CASE OF DIFFICULTY

If this telephone does not work properly, try the following suggestions before seeking repair assistance.

### **No Dial Tone**

- ☞ Make sure all plugs are connected properly. Inspect the line cord connections at the modular jack and at the telephone. Also inspect the coiled handset cord connections at both ends.
- ☞ Unplug the telephone and connect it to another modular jack. If it still does not work, try another telephone; if neither telephone works, the problem is not in your telephone. The trouble may be caused by local telephone company lines, central office equipment, or the wiring in your home.

### **Calls Cannot Be Dialed, Or Are Dialed Slowly**

This product comes set in the tone (TT) mode. Make sure you choose the correct dialing method (TT/DP); touch tone dialing will not work if you have dial pulse service.

If you have tone dialing service, you can use either tone or dial pulse mode. If you set the switch to **TT**, numbers are dialed much more quickly.

### **Telephone Does Not Ring**

- ☞ Make sure the Ringer volume switch is not set to **OFF**.
- ☞ If there are several other phones on the same line, try disconnecting some of the other telephones. Having too many telephones can also create problems such as low ringer volume or impaired quality during calls.

### **Other Problems**

Make sure you have followed all the instructions in this manual. If you continue to have problems, call 1 800 222-3111. If you cannot correct the problem, disconnect the telephone and refer to the warranty information.